KitchenAid®

# COOKTOP PARTS

**For Models:YKESC307HW7, YKESC307HS7, YKESC307HB7, YKESC307HT7**
**(White) (Black Stainless) (Black) (Biscuit)**

30" Slide−In Range
DESIGNER STYLE
Convection Oven

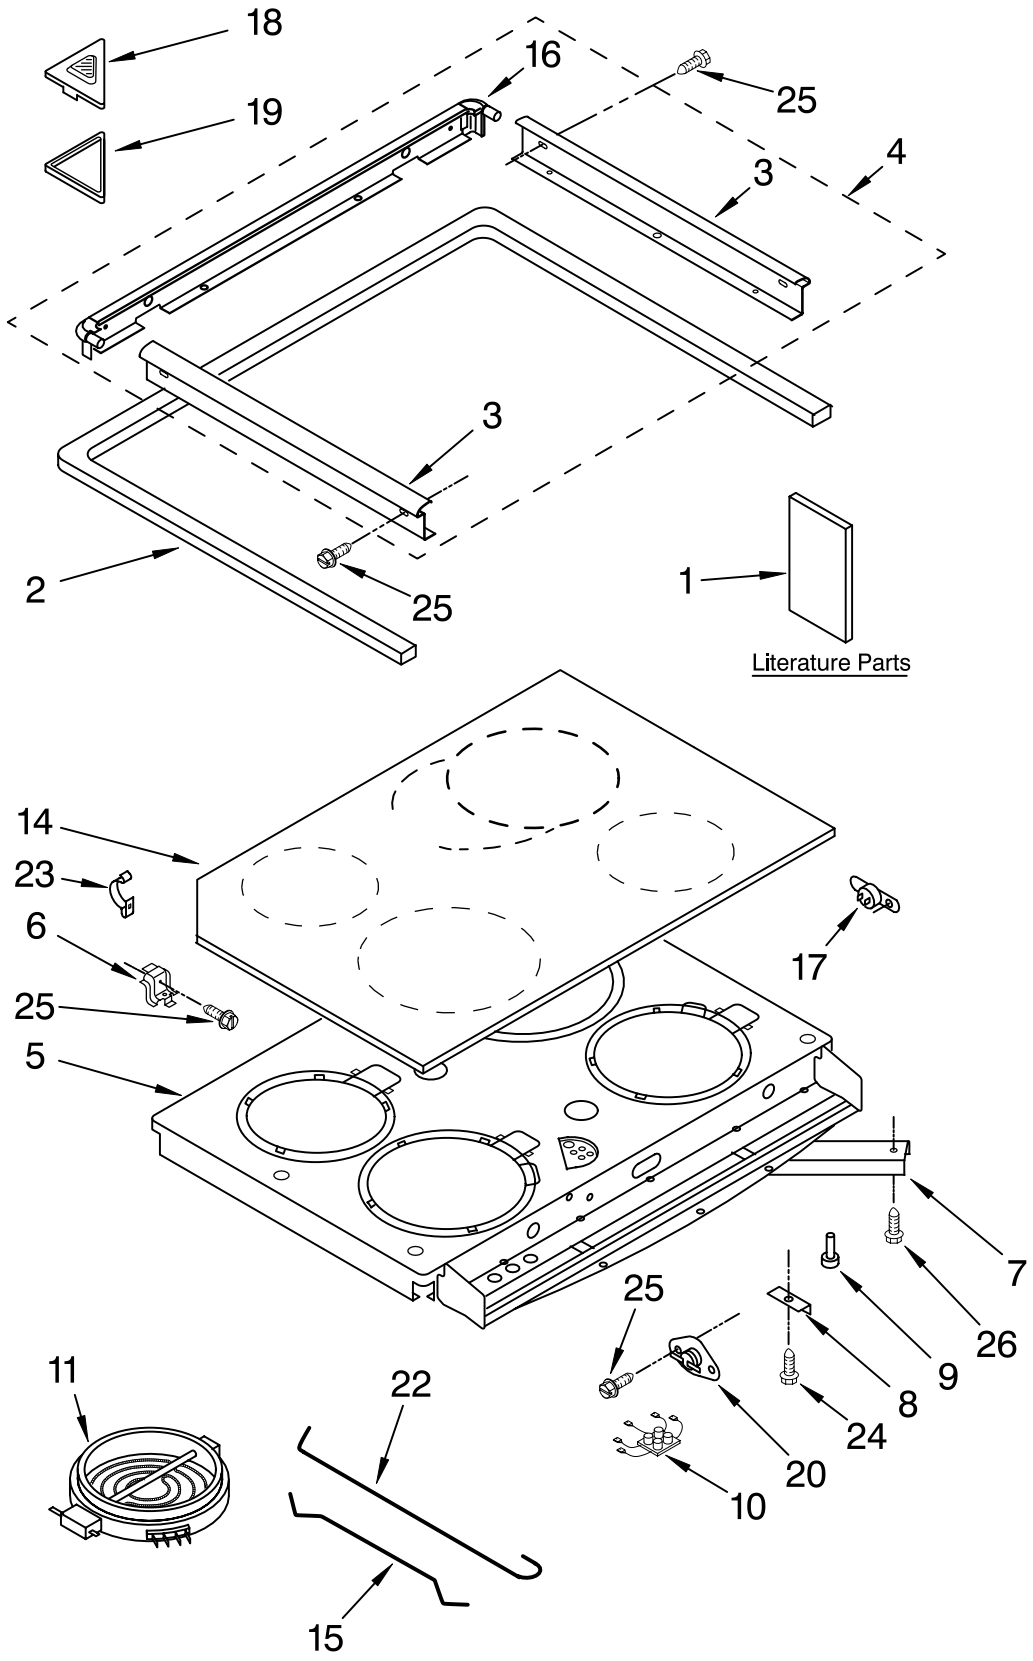


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# COOKTOP PARTS

**For Models:YKESC307HW7, YKESC307HS7, YKESC307HB7, YKESC307HT7**
**(White) (Black Stainless) (Black) (Biscuit)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | | Literature Parts |
| | LIT9755236 | Installation Instructions |
| | | Use & Care Guide |
| | LIT9754287 | English |
| | LIT9754387F | French |
| | | Smart & Easy Guide |
| | LIT9752686 | English |
| | LIT9752687 | French |
| | LIT9753027 | Tech Sheet |
| | LIT9754373 | Wiring Diagram |
| | LIT9752775 | Template, Anti−Tip |
| | LIT3191638 | Safer Cooking Tips |
| 2 | 9754103 | Gasket, Cooktop (Front & Sides) |
| 3 | | Trim, Side |
| | 9781828PW | White |
| | 9781828PB | Black |
| | 9781828PC | Biscuit |
| 4 | | Frame, Cooktop |
| | 9781832PW | White |
| | 9781832PB | Black |
| | 9781832PC | Biscuit |
| 5 | 9752892 | Support, Element |
| 6 | 9751629 | Bracket, Pivot |
| | 9752003 | Washer (2) |
| 7 | 9781553 | Brace, Support |
| 8 | 9753691 | Support Clips (4) |
| 9 | | Bumper, Rubber |
| | 9750969 | White (4) |
| | 9780771 | Black (4) |
| 10 | 9781936 | Hot Light |
| 11 | | Element, Surface |
| | 8272564 | 1500W − LR |
| | 9753997 | 2200W − RR |
| | 8272566 | 1800W − RF |
| | 8272563 | 1000/2500W − LF |
| 14 | | Cooktop, Ceran |
| | 9753711CW | White |
| | 9753711CC | Biscuit |
| | 9753711CB | Black |
| 15 | 9781460 | Rod, Small Ceran Element |
| 16 | | Trim, Back (Incl. End Caps) |
| | 9781831PW | White |
| | 9781831PB | Black |
| | 9781831PC | Biscuit |
| 17 | 341196 | Thermo−Disc |
| 18 | 9751800 | Vent, Cover |
| 19 | 9751841 | Gasket, Vent |
| 20 | 9751984 | Bimetal, Fan |
| 22 | 9781459 | Rod, Large Ceran Element |
| 23 | 98997 | Clip |
| 24 | 9751871 | Screw, 10−16 x 1 |
| 25 | 9780265 | Screw, 10−16 x 3/8 |
| 26 | 9780272 | Screw, 10−16 x 1/2 |

# DOOR AND DRAWER PARTS

**For Models:YKESC307HW7, YKESC307HS7, YKESC307HB7, YKESC307HT7**

**(White) (Black Stainless) (Black) (Biscuit)**

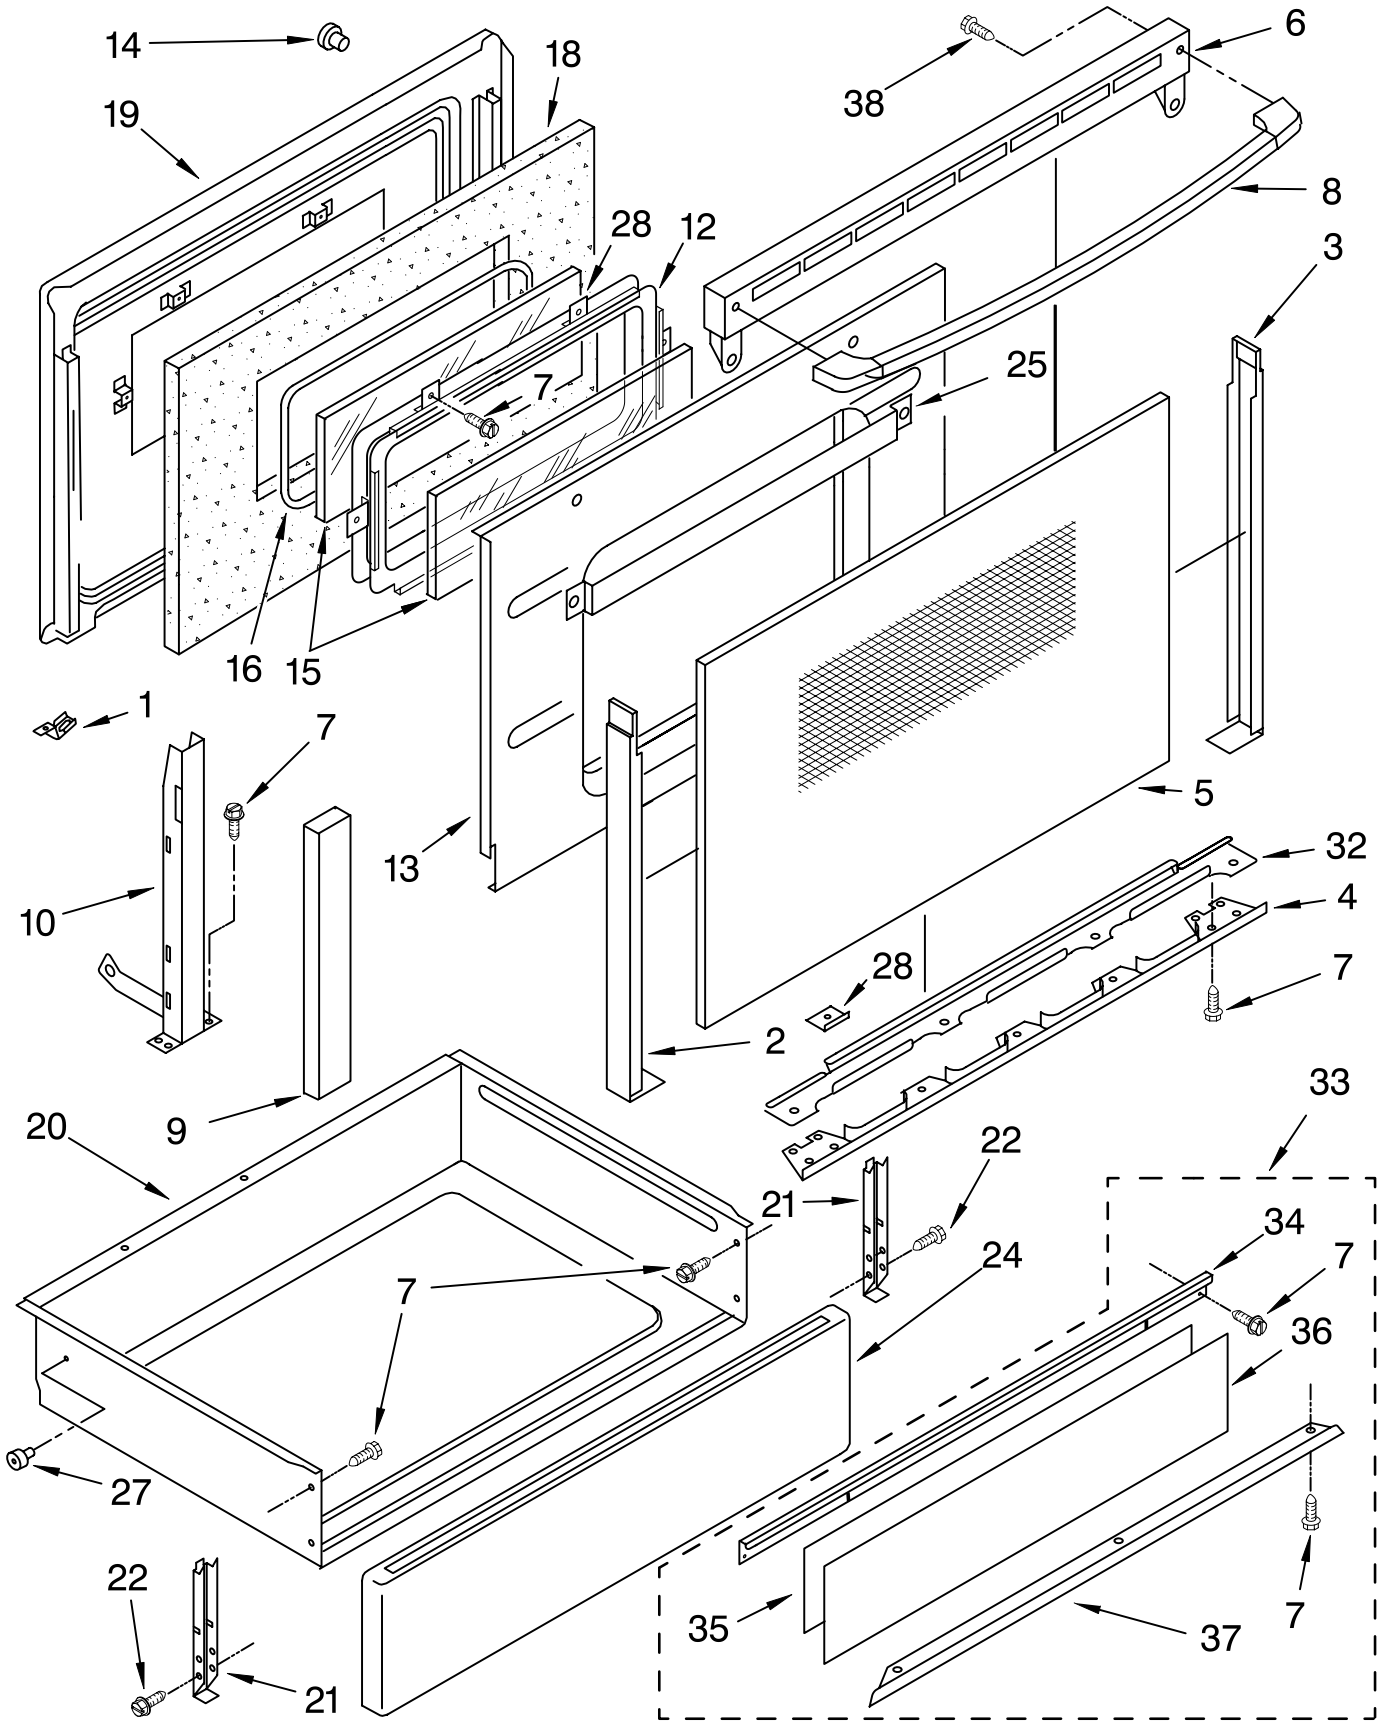


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR AND DRAWER PARTS

**For Models:YKESC307HW7, YKESC307HS7, YKESC307HB7, YKESC307HT7**
**(White) (Black Stainless) (Black) (Biscuit)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 9750676 | Support, Door |
| 2 | | Trim, Door−Left |
| | 9782003PW | White |
| | 9782003PB | Black |
| | 9782003PC | Biscuit |
| 3 | | Trim, Door−Right |
| | 9782004PW | White |
| | 9782004PB | Black |
| | 9782004PC | Biscuit |
| 4 | | Trim, Door Bottom |
| | 9781209PW | White |
| | 9781209PB | Black |
| | 9781209PC | Biscuit |
| 5 | | Glass, Door |
| | 9781627PW | White |
| | 9781627PB | Black |
| | 9781627PC | Biscuit |
| 6 | | Vent, Door |
| | 9753498GW | White |
| | 9753498GB | Black |
| | 9753498GC | Biscuit |
| | 9781659 | Gasket, Door Vent |
| 7 | 9780265 | Screw, 10−16 x 3/8 Vent Side |
| 8 | | Handle, Door |
| | 9780523PW | White |
| | 9780523PB | Black |
| | 9780523PC | Biscuit |
| 9 | 9781449 | Gasket, Door Glass (4) |
| 10 | 9782033 | Hinge, Door R or L |
| | 90296 | Clip |
| 12 | 9781602 | Frame, Window |
| 13 | 9781586 | Shield Door |
| 14 | 9780771 | Bumper, Rubber |
| 15 | 9781593 | Glass, Door (2) |
| 16 | 9755177 | Seal, Glass |
| 18 | 9754006 | Insulation |
| 19 | 9781600GM | Liner, Door |
| 20 | 9780583 | Drawer & Roller |
| 21 | 9750169 | Bracket, Drawer |
| 22 | 9780272 | Screw, 10−16 x 1/2 |
| 24 | | Front, Drawer |
| | 9782108PW | White |
| | 9782108PB | Black |
| | 9782108PC | Biscuit |
| | 9782109PB | Stainless |
| 25 | 9750693 | Heat, Channel |
| 27 | 423713 | Support, Roller |
| 28 | 9781502 | Spacer, Door (8) |
| 32 | 9781771 | Steam, Deflector (Stainless Steel Model Only) |
| 34 | 9750614PB | Trim, Drawer−Top |
| 35 | 9753329 | Spacer |
| 36 | 9754062 | Panel, Drawer (Stainless) |
| 37 | 9750613PB | Trim, Drawer−Bot |
| 38 | 9781072 | Screw, 10−24 x 3/8 |

# OVEN CHASSIS PARTS

**For Models:YKESC307HW7, YKESC307HS7, YKESC307HB7, YKESC307HT7**
**(White) (Black Stainless) (Black) (Biscuit)**

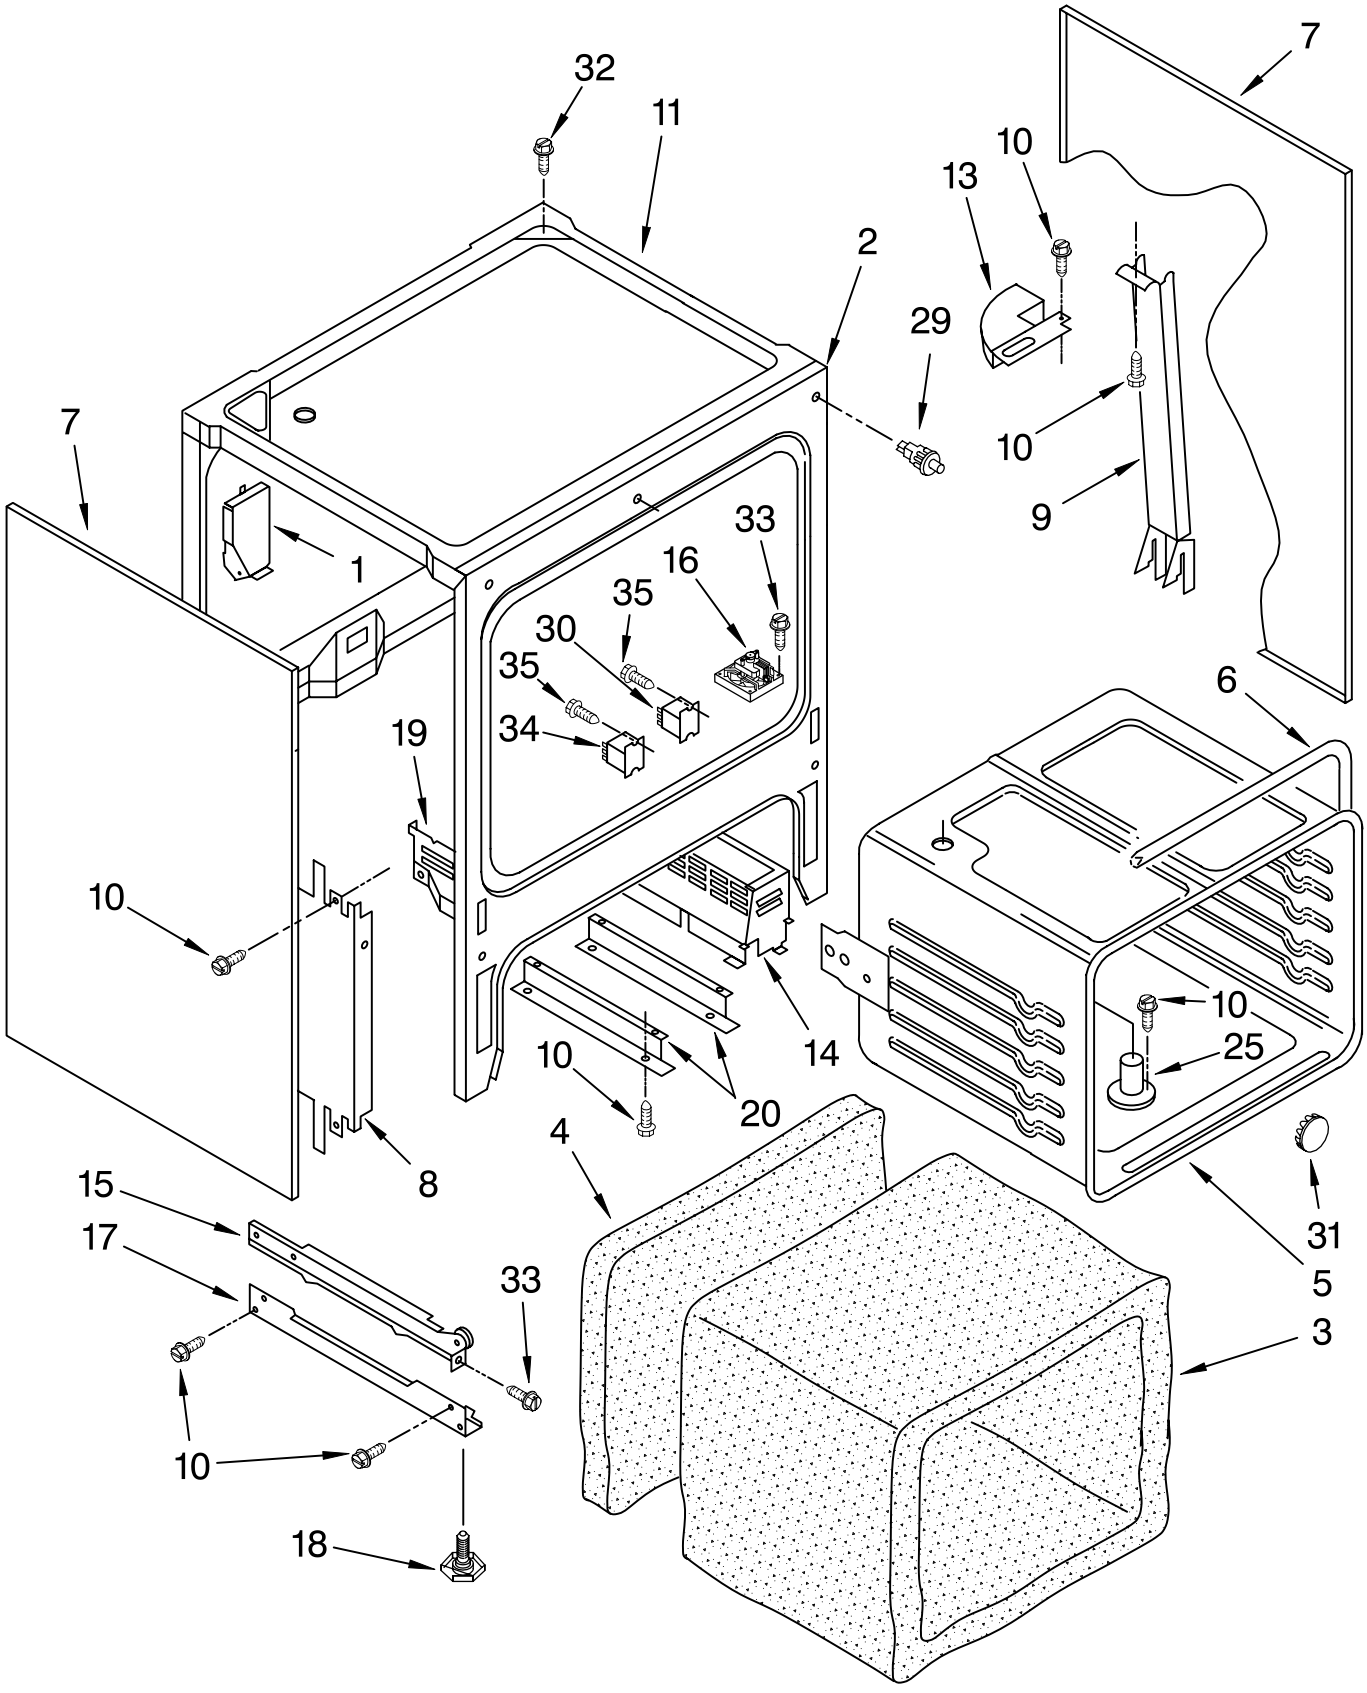


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN CHASSIS PARTS

**For Models:YKESC307HW7, YKESC307HS7, YKESC307HB7, YKESC307HT7**
**(White) (Black Stainless) (Black) (Biscuit)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 9751350 | Vent Box, Oven |
| 2 | 9750514GM | Chassis, Front |
| 3 | 9754003 | Insulation, Wrap |
| 4 | 9754011 | Insulation, Rear |
| 5 | 9753744GM | Oven Liner |
| 6 | 9755179 | Gasket Oven |
| 7 | | Oven , Side L or R |
| | 9781907PW | White |
| | 9781907PB | Black |
| | 9781907PC | Biscuit |
| 8 | 9780664 | Shield, Insulation |
| 9 | 9751789 | Fan Duct, Side |
| 10 | 9780265 | Screw, 10−16 x 3/8 |
| 11 | 9752637 | Burner Box |
| 13 | 9751653 | Duct, Top |
| 14 | 9751060 | Support, Fan |
| 15 | 9750223 | Drawer Rail, Left |
| | 9750224 | Drawer Rail, Right |
| 16 | 9751020 | Motor, Fan |
| 17 | 9750147 | Bottom Rail (2) |
| 18 | 312701 | Foot, (4) |
| 19 | 9782005 | Hinge, Door L or R |
| 20 | 9781904 | Support Rail, Pan |
| 25 | 9753091 | Vent, Tube |
| 29 | 9755192 | Door Switch |
| 30 | 9755194 | Relay |
| 31 | 9780578 | Button, Plug |
| 32 | 9780275 | Screw, 8−18 x 3/8 |
| 33 | 9751808 | Screw, 8−18 x 1/2 |
| 34 | 9752149 | Relay, Cooktop |
| 35 | 9780270 | Screw |

# CONTROL PANEL PARTS

**For Models:YKESC307HW7, YKESC307HS7, YKESC307HB7, YKESC307HT7**
**(White) (Black Stainless) (Black) (Biscuit)**

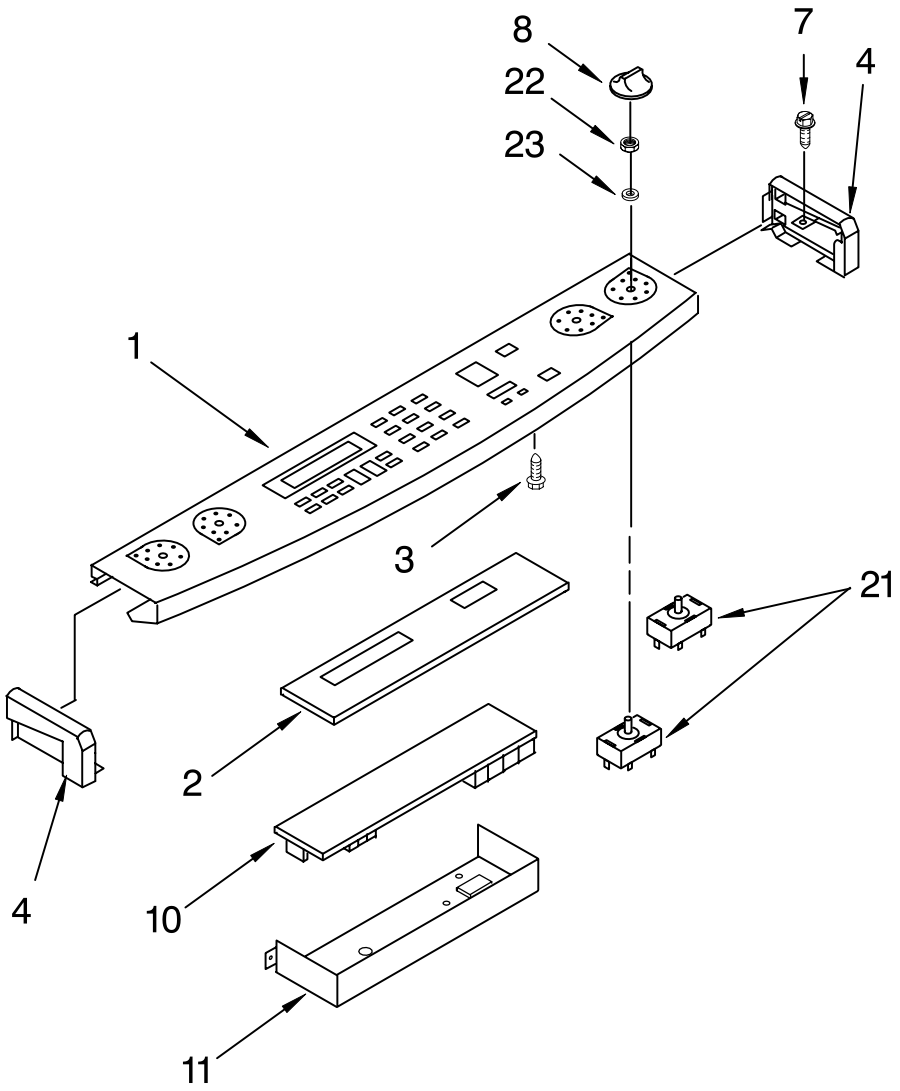


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | | Console, Glass |
| | 9754342CW | White |
| | 9754342CB | Black |
| | 9754342CC | Biscuit |
| 2 | 9754376 | Microcptr |
| 3 | 9780271 | Screw, 8−18 x 1/4 |
| 4 | | End Cap (Right Hand) |
| | 9751040FW | White |
| | 9751040FB | Black |
| | 9751040FC | Biscuit (Left Hand) |
| | 9751039FW | White |
| | 9751039FB | Black |
| | 9751039FC | Biscuit |
| 7 | 9780265 | Screw, 10−16 x 3/8 |
| 8 | | Knobs, Control |
| | 9750372FW | White |
| | 9750372FF | Black |
| | 9750372FC | Biscuit |
| 10 | 9754383 | Microcptr |
| 11 | 9755021 | Shield, Control Panel |
| 21 | | Switch, Infinite |
| | 9751364 | 1500W − LR |
| | 9751363 | 1800W − RF |
| | 9751362 | 2200W − RR |
| | 9755175 | 1000/2400W − LF |
| 22 | | Nut, Mounting |
| | 422617 | Single Element |
| 23 | 9781455 | Seal, Switch (4) |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

**For Models:YKESC307HW7, YKESC307HS7, YKESC307HB7, YKESC307HT7**
**(White) (Black Stainless) (Black) (Biscuit)**

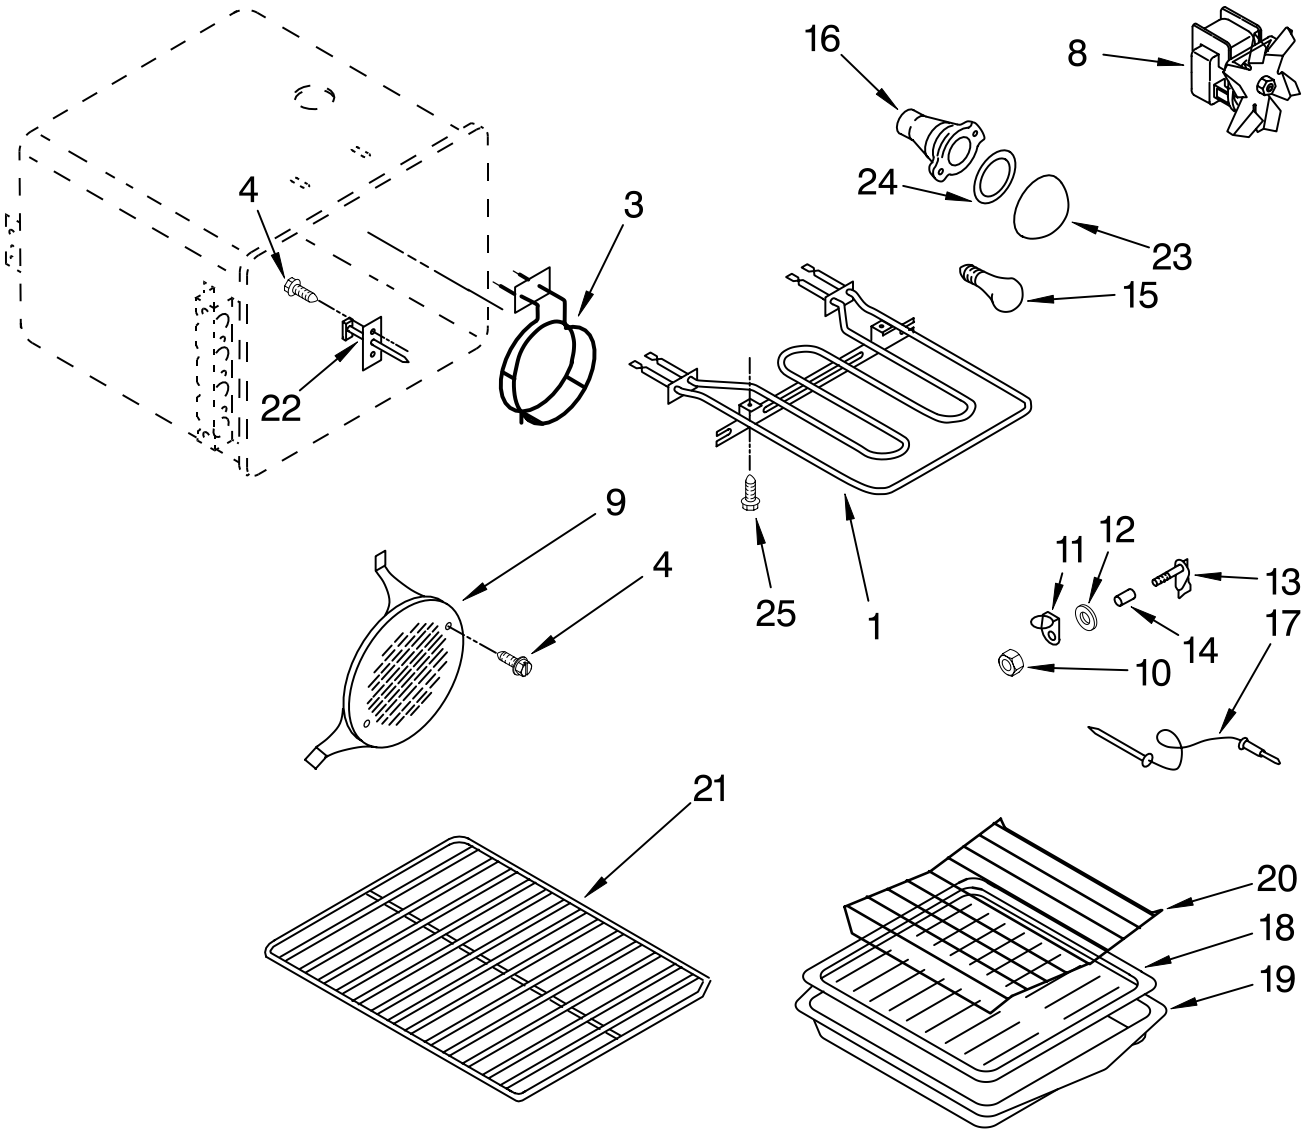


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 9750967 | Element, Broil |
| 3 | 9751447 | Element, Convection |
| 4 | 9781509 | Screw, 8−32 x 3/8 |
| 8 | 9781543 | Assembly, Fan |
| | 9780272 | Screw (3) 10 x 1/2 |
| 9 | 9751904GM | Baffle, Convection |
| | 9781509 | Screw (2) |

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 10 | 4167277 | Lock−Nut, Cvr.Jack |
| 11 | 4167266 | Jack Cover |
| 12 | 305289 | Gasket |
| 13 | 4173575 | Receptacle, Probe |
| 14 | 3179672 | Spacer, Tubing |
| 15 | 8935 | Bulb, Oven |
| 16 | 9781050 | Light, Socket |
| 17 | 3150144 | Probe |

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 18 | 420104GM | Grill, Broiler |
| 19 | 420101GM | Pan, Broiler |
| 20 | 9750827 | Rack, Roasting |
| 21 | 9750823 | Rack, Standard (3) |
| 22 | 9782081 | Sensor |
| 23 | 9781049 | Lens, Light |
| 24 | 3184533 | Gasket, Lens |
| 25 | 340184 | Screw, 10−16 x 1.5 |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# REAR CHASSIS PARTS

**For Models:YKESC307HW7, YKESC307HS7, YKESC307HB7, YKESC307HT7**
**(White) (Black Stainless) (Black) (Biscuit)**

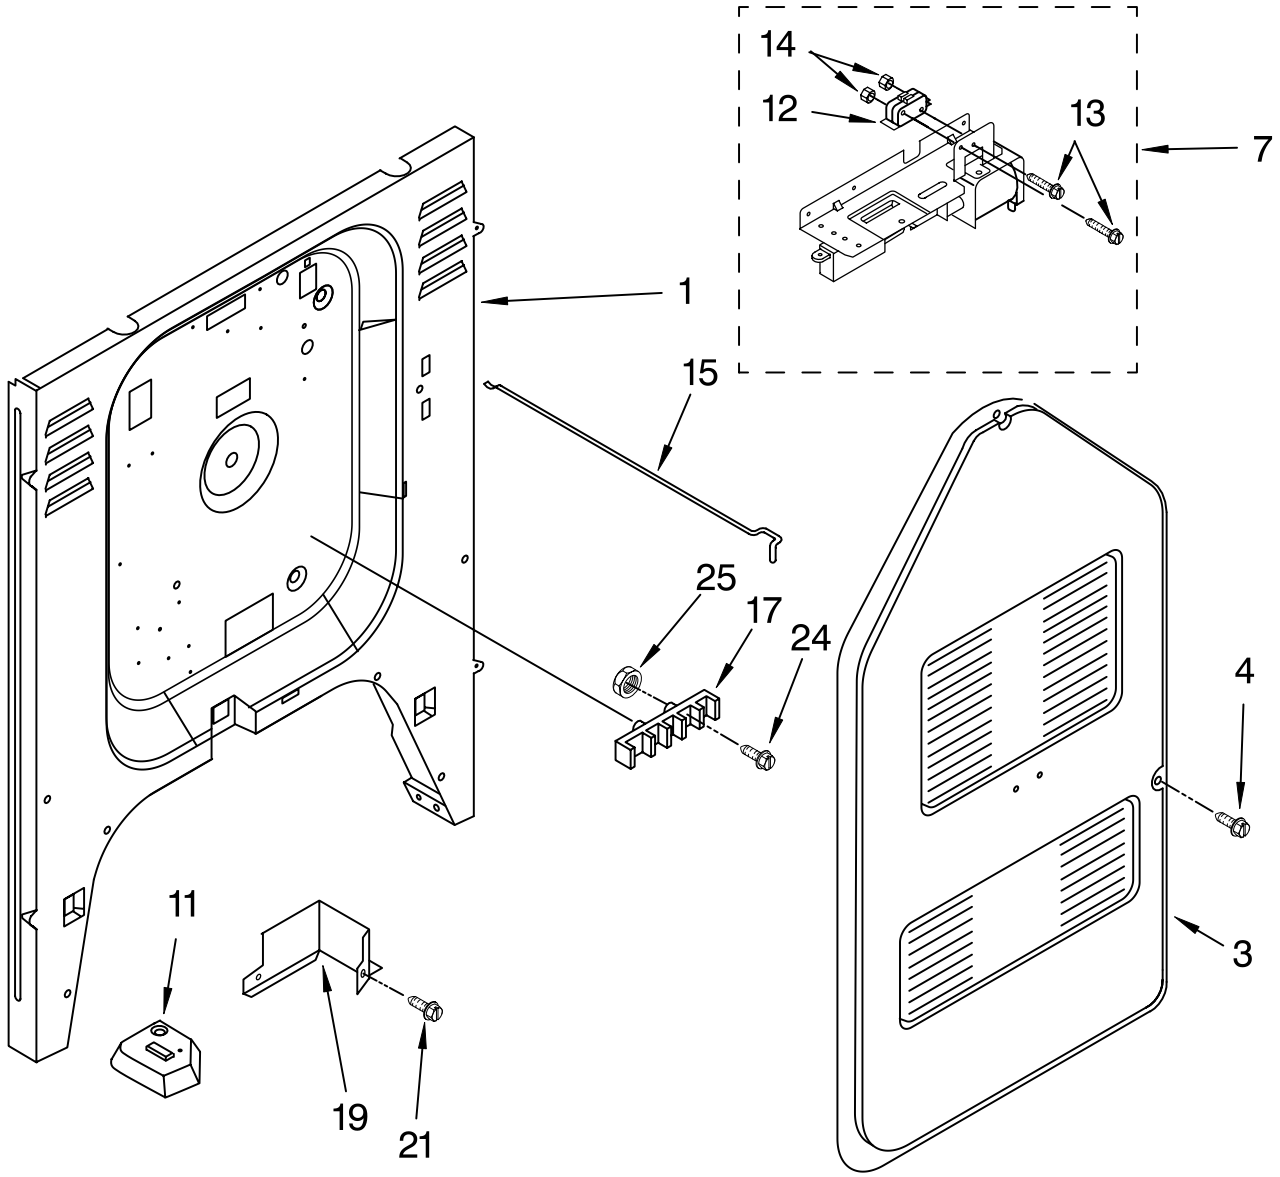


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 9751051 | Back Panel,Chassis |
| 3 | 9751353 | Panel, Rear Cover |
| 4 | 423247 | Screw |
| 7 | 9782610 | Oven Lock Assembly |
| 11 | 9782330 | Block, Balance |
| 12 | 9782106 | Switch, Interlock |
| 13 | 9750887 | Screw, 4−40 x 1 |
| 14 | 9750888 | Nut |
| 15 | 9750523 | Rod, Lock |
| 17 | 258076 | Terminal Block |
| | 313660 | Clip |
| 19 | 9751798 | Back, Vent |
| 21 | 9780272 | Screw, 10−16 x 1/2 |
| 24 | 98884 | Screw, 10−16 x 1 |
| 25 | 112432 | Nut, 10−32 Hex |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# HIDDEN BAKE PARTS

**For Models:YKESC307HW7, YKESC307HS7, YKESC307HB7, YKESC307HT7**
**(White) (Black Stainless) (Black) (Biscuit)**

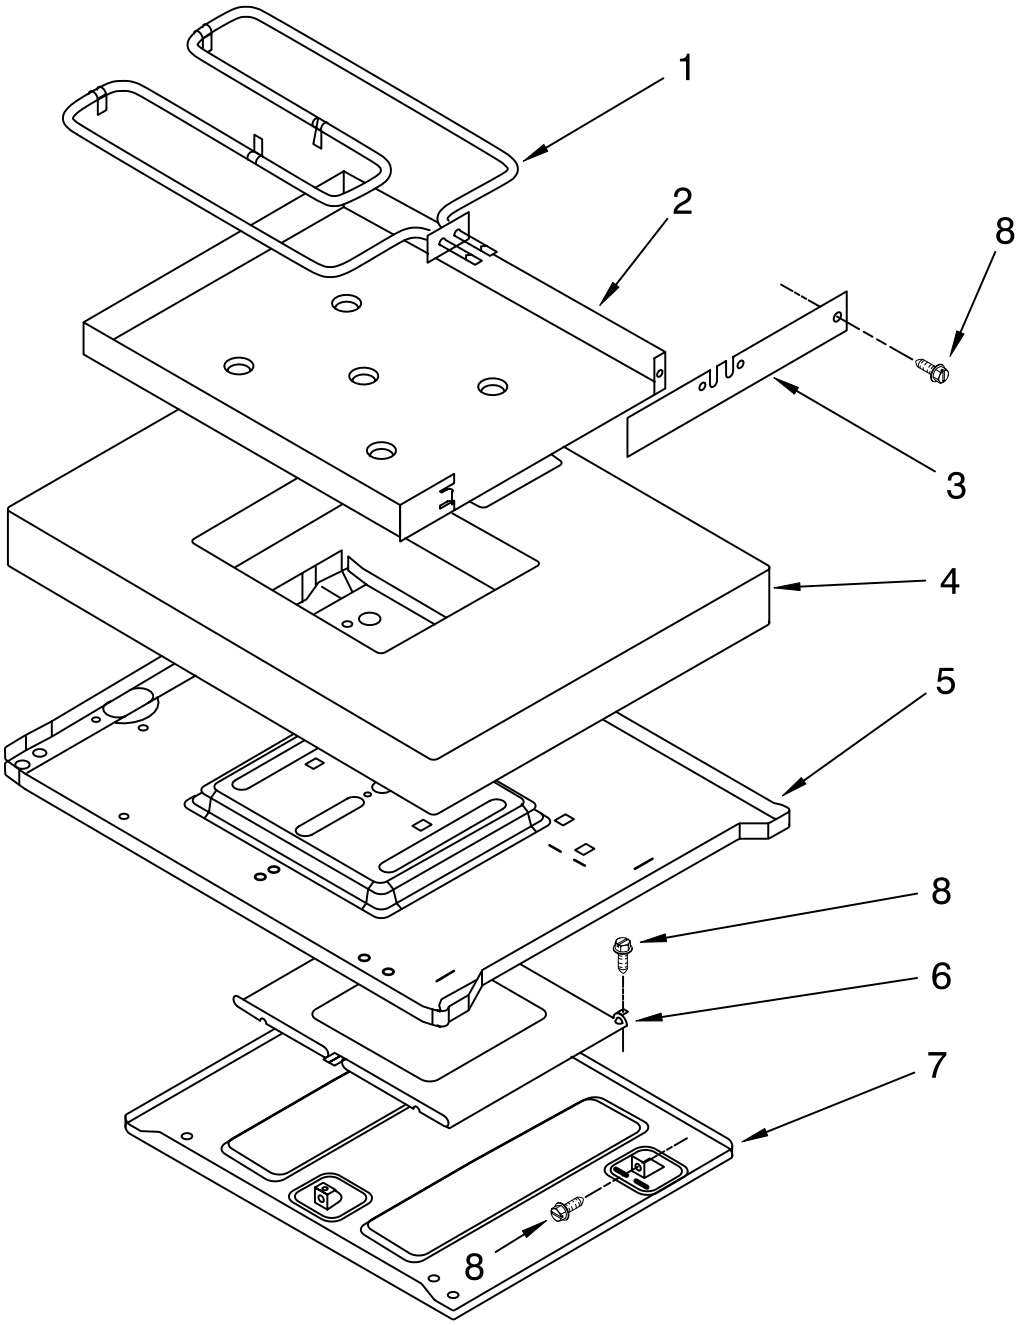


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 9752294 | Element, Bake |
| 2 | 9782048 | Pan, Hidden Bake |
| 3 | 9782049 | Cover, Pan |
| 4 | 9754005 | Insulation |
| 5 | 9752735 | Retainer, Insulation |
| 6 | 9782050 | Plate, Reflector |
| 7 | 9782051 | Shield |
| 8 | 9780265 | Screw, 10−16 x 3/8 |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# MISCELLANEOUS PARTS

**For Models:YKESC307HW7, YKESC307HS7, YKESC307HB7, YKESC307HT7**
**(White) (Black Stainless) (Black) (Biscuit)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|

### SPLICING WIRES−−25FT. LENGTH

| | |
|---|---|
| 242828 | Wire, Black 12 Ga. 150°c |
| 242820 | Wire, Black 14 Ga. 150°c |
| 242821 | Wire, Blue 14 Ga. 150°c |
| 242822 | Wire, Brown 14 Ga. 150°c |
| 242830 | Wire, Brown 14 Ga. 200°c |
| 242823 | Wire, Green 14 Ga. 150°c |
| 242824 | Wire, Orange 14 Ga. 150°c |
| 242829 | Wire, Red 12 Ga. 150°c |
| 242825 | Wire, Red 14 Ga. 150°c |
| 242831 | Wire, Red 14 Ga. 200°c |
| 242826 | Wire, White 14 Ga. 150°c |
| 242827 | Wire, Yellow 14 Ga. 150°c |
| 242832 | Wire, Yellow 14 Ga. 200°c |

### PAINT, TOUCH−UP (1/2oz.)

| | |
|---|---|
| 72017 | White |
| 72107 | Almond |
| 511873 | White Porcelain (2 Oz.) |
| 4392899 | Biscuit |

### PAINT, PRESSURIZED SPRAY (12 oz.)

| | |
|---|---|
| 350930 | White |
| 350956 | Almond |
| 285006 | Superior Black |
| 206922 | Primer (White) |
| 4392901 | Biscuit |

### PAINT, BULK (1 qt.)

| | |
|---|---|
| 799344 | White (Uncut) |
| 4392900 | Biscuit |

### REFINISHING MATERIAL

| | |
|---|---|
| 799832 | Kit, Porcelain Repair (White) |
| 242756 | Touch−Up Self−Clean (1/2 Pt.) |

### CLEANER, COOKTOP

| | |
|---|---|
| 3184477 | Glass Cleaner |
| 3183488 | Scraper |
| 9753543 | Cooktop Cleaner |

### ACCESSORIES

| | |
|---|---|
| 241430 | Foil, Aluminum Oven (18" X 25') |

### LUBRICANT

| | |
|---|---|
| 261582 | Grease |

### ANTI−TIP KIT

| | |
|---|---|
| 9751745 | Anti−Tip Kit |

### WIRING HARNESS PARTS

| | |
|---|---|
| 9755012 | Harness, Wire (SI/Main/Conv) |
| 9782141 | Harness, Wire (Control) |
| 9781656 | Harness, Wire (L−2) |
| 9782183 | Harness, Wire (Cooktop) |
| 9781769 | Harness, Wire (Front Console) |
| 9755193 | Harness, Wire (Door Switch) |
| 9755024 | Harness, Wire (Meat Probe) |
| 9754371 | Harness, Wire (Hidden Bake) |
| 9753374 | Harness, Wire (Dual Oven Light) |
| 9782142 | Harness, Wire (Relay, CND.) |
| 9782182 | Wire, Jumper |
| 9751868 | Grommet, Harness |
| 20082084 | Tie, Wire |
| 98997 | Clip, Wire |
| 9782111 | Wrap, Tie |
| 90016 | Clip, Wire |
| 9781287 | Cord, Power |
| 9750984 | Cable Hanger |